Qman

MODEL POWER

2.4G
2.4G REMOTE CONTROL

AI
AI PROGRAMMING

ROUTE PLANNING

54004

Ages: 8+

REMOTE CONTROL LEAPING JEEP

Pictures are for your reference only. The delivered goods shall prevail.

Dual controllers offer a seamless and smooth gaming experience

Product Summary | 产品概览:

1x
Smart Creative
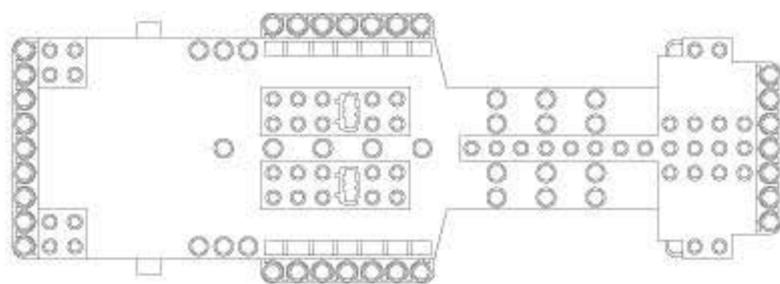Module
动力模块

1x
Remote
Control
遥控器

1x
Building Blocks
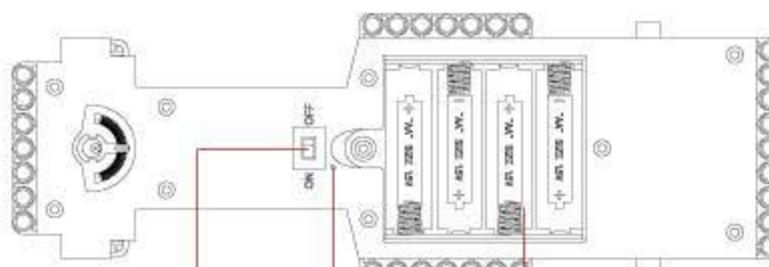Instructions
搭建手册

3x
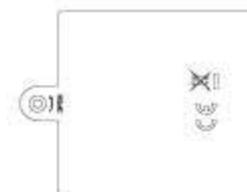Building Block
Parts
积木零件包

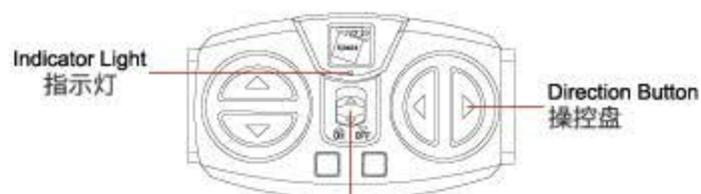# Smart creative module | 动力模块:

Front View
正面

Power
电源开关

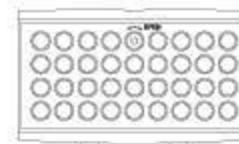Indicator Light
指示灯

Battery Case
电池盒

Rear view
背面

Remote Control | 遥控器:

Indicator Light
指示灯

Direction Button
操控盘

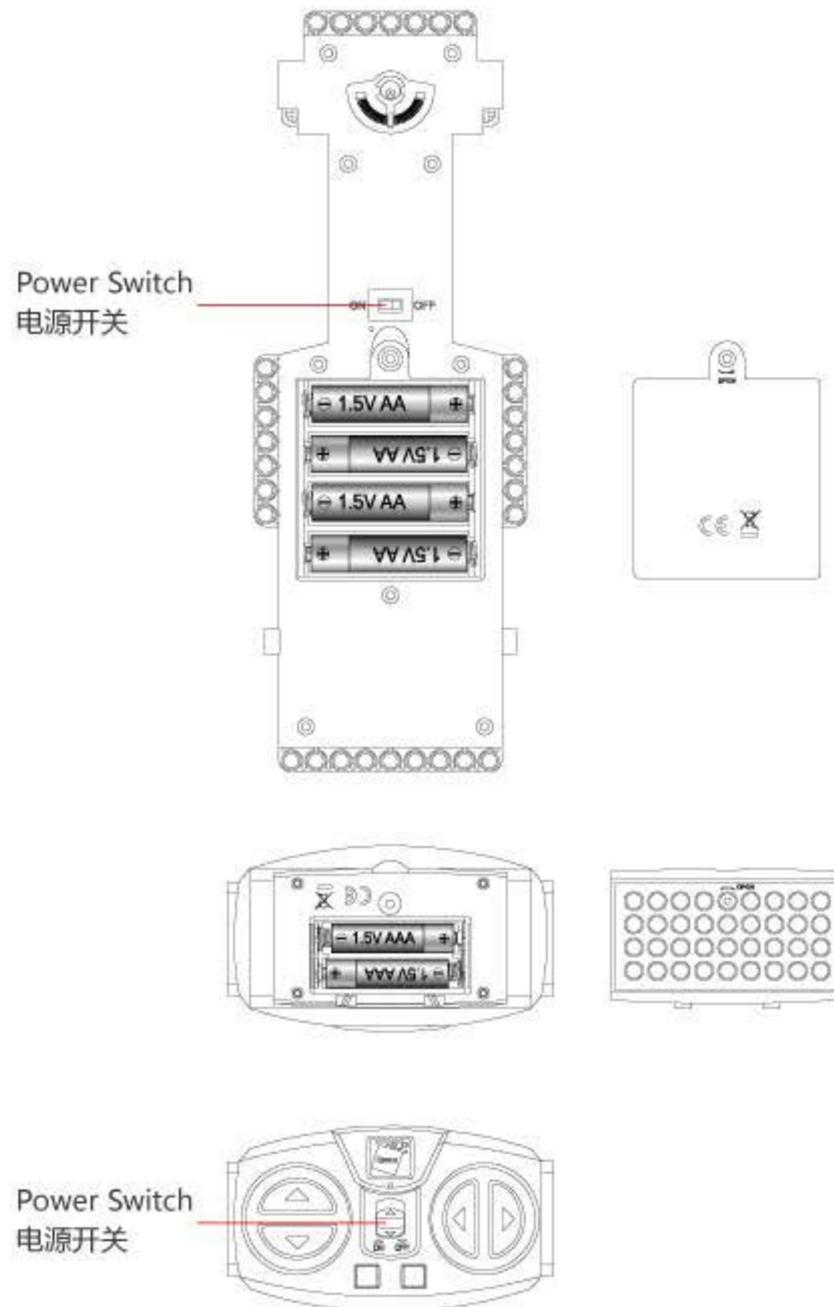Power
电源开关

Front View
正面

Battery Case
电池盒

Rear view
背面

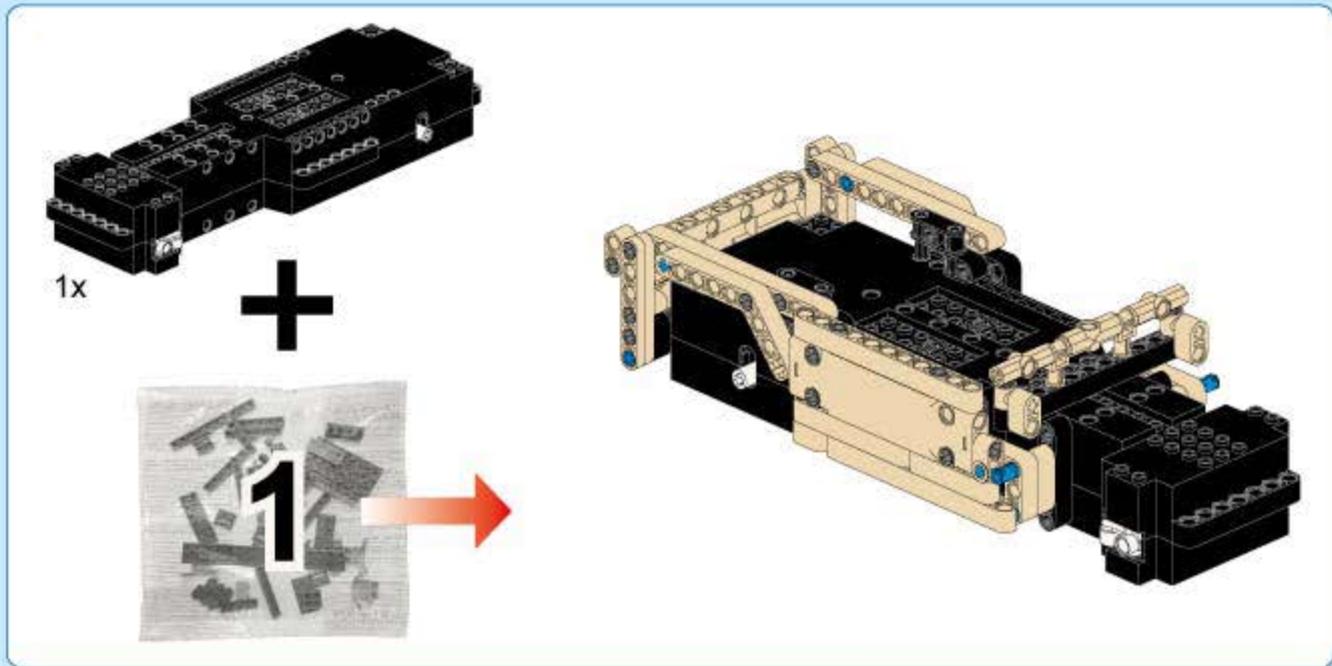Pictures are for your reference only.
The delivered goods shall prevail.
图片仅供参考，请以实物为准。

Operation for Electric-powered Device ｜电动装置操作
Battery Cautions ｜电池注意事项

1,The main control module with 4*1.5V AA non-rechargeable battery, and the remote control with 2*1.5V AAA non-rechargeable battery.

2, The putting in and taking out for batteries: Loosen the screw with a screwdriver, uncover the battery cover, insert in the battery correctly according to the polarity and voltage marks on the battery case, and lock the battery cover; Please remove the battery in reverse order.

3, Non-rechargeable batteries are not rechargeable.

4, Rechargeable batteries should be charged under adult supervision.

5, Do not use batteries with different types or old and new batteries at the same time.

6, Batteries of the same type or the same type as recommended could only be used.

7, Batteries should be inserted in by correct polarity.

8, Depleted batteries should be taken out from the product. If the product is idle for a while, please also take out batteries.

9, Do not short-circuit the power terminal.

10, Rechargeable batteries should be removed from toys before charging.

1.动力模块使用4*1.5V AA非充电电池，遥控器使用2*1.5V AAA非充电电池。

2.电池装入和取出：用螺丝刀松螺丝钉，揭开电池盖，按玩具电池室上的极性和电压标志正确安装电池，并锁上电池盖；取出电池时，按相反顺序操作。

3.非充电电池不能充电。

4.充电电池需在成人监护下充电。

5.不同类型的电池或新旧电池不能混用。

6.型号相同或与推荐型号等同的电池才可以使用。

7.电池应以正确的极性放入。

8.用尽的电池应从玩具中取出，若长时间不使用，请将玩具中电池取出。

9.电源端子不得短路。

10.充电电池在充电前应从玩具中取出。

Power Switch
电源开关

1.5V AA
1.5V AA
1.5V AA
1.5V AA

1.5V AAA
1.5V AAA

Power Switch
电源开关

1x

+

1

1

1x

2x

2

2x [5] 4x

[5] 1:1

2x

3

1x 1x 3x 1x 1x

1

2

3

4

4

4

2x   1x   1x

5

1x   1x

1:1

6

11
1x   2x
1x   1x

7

6
2x   1x   1x   2x

1

2

3

1

2

3

6

2x   1x   1x

9

1x   1x

11 1:1

10

1x   [11]   2x

1x   1x

1

2

3

11

1x   1x   1x

12

2x   2x

2x

13

1x   1x

14

1x   2x

15

1x   1x

16

10

15

9

1:1

5

6

17

6
2x   1x   1x   3x

1

2

3

18

5
2x   4x

2x

19

1x   1x   3x   1x   1x

1

2

3

4

20

1x [7]   2x

[7] **1:1**

21

2x

5

11

1:1

5x

22

11

1x   1x

✓   ✗

23

5

1x   2x   1x

1   **2**

24

1x

26

11

1x

27

1x   1x   1x

28

1x   11   2x

11 1:1

19

27

29

2x   2x   2x

✓ ✗

1

2

2x

3x 2x 2x ③

③ 1:1

1

2

3

2

1:1

5

10

31
1x 10 1x

32
2x

33
1x 5 1x

34
1x 1x 1x

35
1x 2x

36
1x 2x

37
1x 1x

38

1x   2x   1x

1

2

39

1x   1x

40

1x   1x

41

1x   1x

42

1x   1x   1x

43

2x   2x

2x

44

3x   3x

3x

7

9 1:1

45

44

41

46

1x   1x

47

7   2x   2x

1x

2x

48

9

1x   1x   3x

1

2

49

9

1x   1x   3x

1

2

17

50

1x 1x 1x 3x 1x

1
2
3

⁴ **1:1**

52

1x 1x 1x

53

1x 1x

51

1x 1x 1x 3x 1x

1
2
3

54

1x 1x

55

1x 1x 1x 1x

1 2

18

51

55

2x

1x

1x3

4x

4x

2x

60

30

1x   2x   1x   3x

1   2   3

63

1x 1x 2x

1 2

64

1x 2x

67

1x ⑨   **1x**

65

1x ⑪   **2x**

1:1

⑨
⑪

66

1x ⑨   **2x**

68

2x   **2x**   **4x**

1

2

2x

64

68

70

1x   1x   3x

1

2

1:1

71

2x 2x 1x

1 2 3

72

1x 1x 1x

1:1

79

1x   11   1x   1x

80

1x   1x   1x

1   2

81

72

80

82

1x 1x 2x

83

1x 1x

84

1x ⑦ 1x

⑦ **1:1**

85

1x 1x

1x   1x

1x   1x

88

87

82

3

89

1x   1x

90

1x

91

2x   4x

5

5   1:1

2x

1:1

92
1x   2x

93
1x   1x   1x

94
2x   2x   2x   2x   2x

1
2
2x

95
1x   7   2x

96
3x

30

1x   1x

3x

7
1x   2x

7 **1:1**

1x   1x

100

88

1x   3x   4x

11   1:1

1

2

1

2

3

1x   2x   1x   3x

1

2

104

2x 1x 5x

11 1:1

1

2

3

35

105

2x   1x   5x

11 1:1

1

2

3

106 1x 2x 2x ② 2x

107 1x 1x

108 2x ④

109 1x 1x 2x

110 1x 2x

111 ⑧ 1x 1x

112 1x 1x

1:1 ④ ②

⑧

113

1x

114

110

113

115

2x ⑤

2x

⑤ **1:1**

114

105

2x 2x 2x

2x

2x   2x   2x

2x   2x

1

1

2

2

2x

Link Operation | 连接操作

Turn on the switch of the main control module, then turn on the switch of the remote control. when the remote control indicator light is on, the link is successful.

首先打开动力模块开关，再打开遥控器开关，当遥控器指示灯长亮时，链接成功。

OFF   ON

APP Installation | 安装APP:

This product needs to be used with your mobile phone or tablet
本产品需要搭配您的手机或平板使用

Scan QR code，install "MODEL POWER"!
扫一扫安装二维码，
即可安装"启蒙遥控车"!

APP Store

Android App Store
安卓应用商店

Note: The instructions contain
important information. Please
keep it properly. It will take
some time for installation.
Please wait patiently.

注意：此说明书含有重要信息，
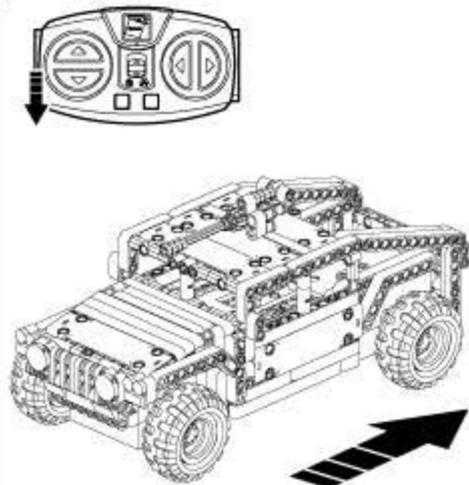请妥善保留，遗失不补，安装
需要一些时间，请耐心等待。

MODEL POWER

54003 REMOTE CONTROL PANTHER TANK
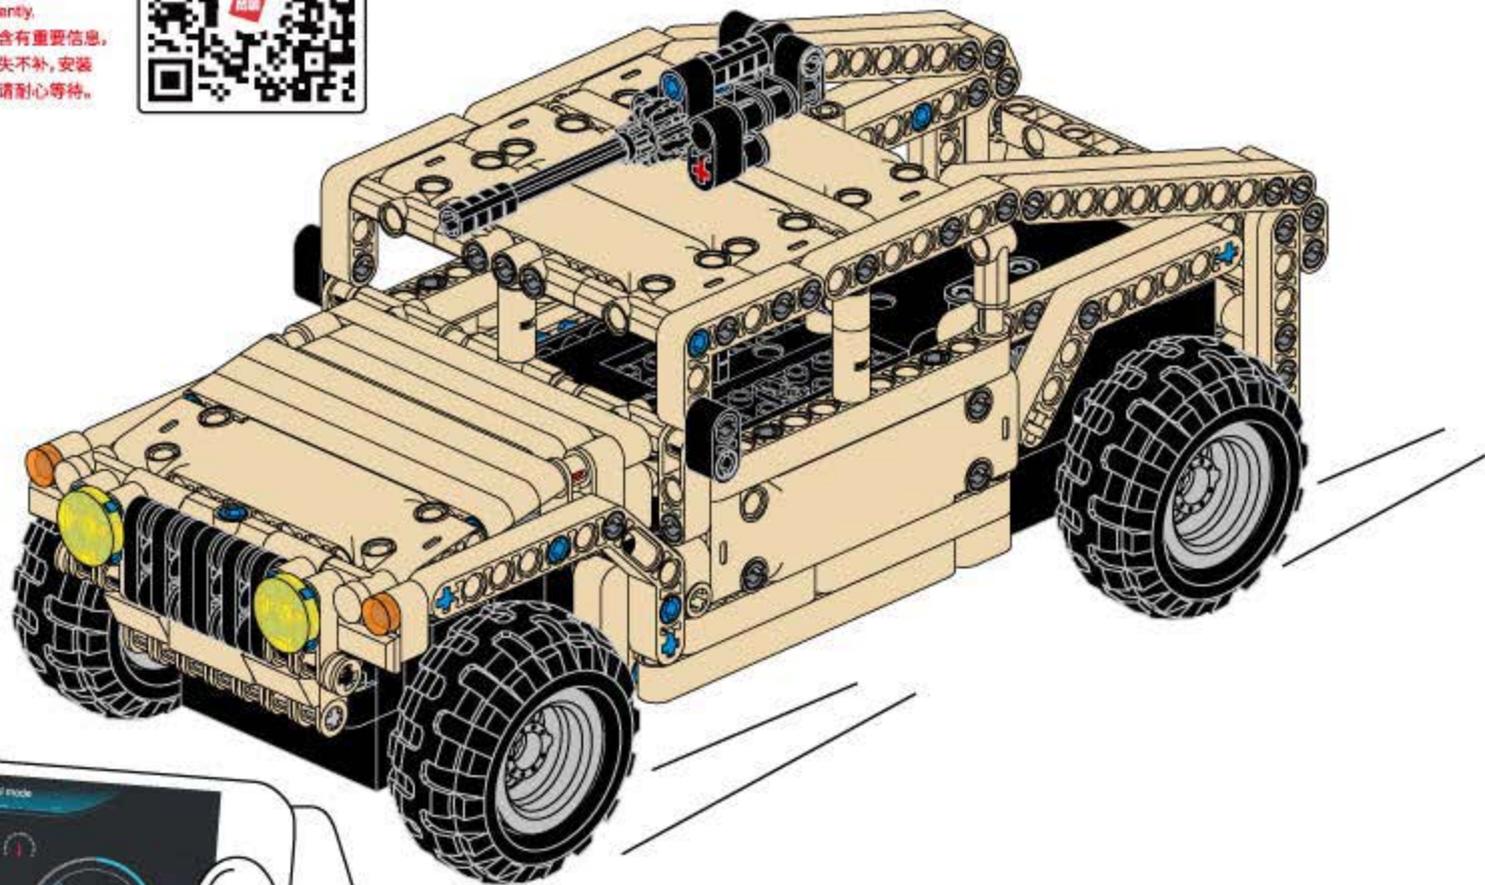
54004 REMOTE CONTROL LEAPING JEEP

54005 REMOTE CONTROL PHANTOM SUPERCAR

54006 REMOTE CONTROL MIGHTY SUPERCAR

V1.0